

Webb Research Corporation

82 Technology Park Drive, E. Falmouth, MA 02536-4441 (508) 548-2077 FAX (508) 540-1686

USER MANUAL – APEX-SBE PROFILER

Serial #'s 1657~1667

REV DATE: 08-04-04
WRC Job no. 934/993 OGS Poulain.
Software Rev 05-18-04
Type Park and Profile(x2) with 28-bit ID

I.	ALKALINE BATTERY WARNING	2
II.	RESET AND SELF TEST	2
III.	DEPLOYMENT	4
IV.	PARK AND PROFILE(X2) FEATURE	4
V.	ARGOS DATA	6
	A. SERVICE ARGOS PARAMETERS.....	6
	B. DATA FORMAT (NO 19) FOR 28-BIT ARGOS ID.....	6
	C. TIMESTAMPS.....	8
	D. DEPTH TABLE No. 64.....	9
	E. TEST MESSAGE FORMAT.....	11
	F. TELEMETRY ERROR-CHECKING (CRC).....	13
	G. CONVERSION FROM HEXADECIMAL TO USEFUL UNITS.....	13
VI.	MISSIONS	14
	APPENDIX A: FLAG BYTE DESCRIPTION	20
	APPENDIX B: CRC ALGORITHM IN BASIC FOR 28 BIT ID	22
	APPENDIX C: SURFACE ARRIVAL TIME, AND TOTAL SURFACE TIME	23
	APPENDIX D: ARGOS ID FORMATS, 28 BIT AND 20 BIT	25
	APPENDIX E: STORAGE CONDITIONS	25
	APPENDIX G: RETURNING APEX FOR FACTORY REPAIR OR REFURBISHMENT	25
	APPENDIX G: CTD CALIBRATION AND BALLASTING RECORDS	26

I. ALKALINE BATTERY WARNING

The profiler contains alkaline "D" cells.

There is a small but finite possibility that batteries of alkaline cells will release a combustible gas mixture. This gas release generally is not evident when batteries are exposed to the atmosphere, as the gases are dispersed and diluted to a safe level. When the batteries are confined in a sealed instrument mechanism, the gases can accumulate and an explosion is possible.

Webb Research Corp. has added a catalyst inside of these instruments to recombine Hydrogen and Oxygen into H₂O, and the instrument has been designed to relieve excessive internal pressure buildup by having the upper end cap release.

Webb Research Corp. knows of no way to completely eliminate this hazard. The user is warned, and must accept and deal with this risk in order to use this instrument safely as so provided.

Personnel with knowledge and training to deal with this risk should seal or operate the instrument. Webb Research Corp. disclaims liability for any consequences of combustion or explosion.

II. Reset and Self Test

Profilers are shipped to the deployment site in Hibernate mode. Shortly before deployment, reset the profiler by passing a magnet over the marked location on the pressure case. The profiler will run a self-test, transmit for 6 hours with the bladder extended, and then begin its pre-programmed mission.

The six ARGOS transmissions during self-test and the transmissions during the initial 6 hour period contain data about the instrument and are outlined in (V) ARGOS DATA, part (C) TEST MESSAGE FORMAT.

Procedure:

1. Secure float in horizontal position, using foam cradles from crate.



IMPORTANT:
Remove plastic bag
and three plugs from
CTD sensor, if they
have not already been
removed.





2. Minimum temperature -2 deg C. If necessary, let float warm indoors before proceeding.
3. Carefully remove black rubber plug from bottom center of yellow cowling to verify bladder inflation (per below). **Use fingers only- tools may puncture bladder. Be sure to replace plug before deployment.**

Note: it can be very difficult to replace plug when air bladder is fully inflated. Replace plug during beginning of air bladder inflation.

Purpose of plug is to prevent silt entry if float contacts sea floor.

4. Hold provided magnet at RESET position marked on for several seconds, then remove magnet.

Note: Magnetic switch must be activated (held) for at least one second to reset the instrument. (This is to provide a safety against accidental reset during transport.) **Thus, if the float does not respond as below, the instrument was probably not reset.**

5. The air pump will operate for 1 second.
6. The PTT will transmit 6 times at 6 second intervals. Place ARGOS receiver/beeper close to antenna to detect transmissions.
7. The piston pump will begin to operate. The piston will move to the retracted Storage Position, if not already there, pause 2 seconds and then move to full extension.
8. The oil bladder will expand, this should take 15 - 25 minutes.
9. After the piston pump stops, PTT will transmit at specified ARGOS rate.
10. At every PTT transmission, the air pump will turn on for 6 seconds until the air portion of the bladder has been inflated. The pump should turn on 8 – 10 times.
11. 6 hours after reset, transmissions will cease, the bladder will deflate, and the piston pump will retract, the profiler begins its programmed mission.
12. Reminder - replace black rubber plug in cowling hole before deployment.

During self-test, the controller checks the internal vacuum sensor. If the internal pressure has increased above a preset limit (i.e. hull leakage caused loss of vacuum), the instrument will not pump. **If you do not detect the 6 test transmissions, and if the bladder does not inflate, then the self-test has failed and the instrument should not be deployed!**

III. Deployment

- RESET instrument.
- SELF-TEST starts automatically (see above).
- When piston pump stops, air pump inflates, external bladder is full, PTT will transmit for 6 hours at ARGOS Repetition rate intervals. Typical repetition rate is 90 seconds or less. Programmed repetition rate can be found in the Missions section of this manual.
- If the repetition rate is 120 seconds the controller is not communicating properly with the CTD and the float should not be deployed.
- Six hours after reset, the piston pump will retract and bladder will deflate. Deploy before this time is up or reset the instrument again to re-initialize the 6 hour period. The purpose is to have the instrument on the surface and receive test transmissions.
- Pass a rope through the hole in the damper plate.
- Holding both ends of doubled up rope, carefully lower the float into the water. Do not let rope slide through hole in disk- this may cut the plastic disk.
- Take care not to damage the antenna.
- Do **not** leave the rope with the instrument, release one end and retrieve the rope.
- The float will remain on the surface until the 6 hour interval has expired.

IV. PARK and PROFILE(x2) Feature

The optional park and profile feature allows the float to drift (i.e. “park”) at an intermediate depth, then descend to a greater depth before making profile measurements during ascent to the surface.

The **park and profile(x2) feature allows use of two profile depths in a programmed sequence.**

Terminology:

PARK: intermediate depth at which the float drifts (menu parameter P1)

PROFILE: deeper depth to which the float descends before profiling up (parameters P6 and PF)

DOWN time: spent during descent and at park depth (parameters D1 and D2)

UP time: includes ascent and time at surface (parameters U1 and U2)

Cycle timing (UP and DOWN times) are defined by:

parameters U1 and D1 for profile pressure P6

parameters U2 and D2 for profile pressure PF.

The sequence of profile pressures is set by parameter PD.


For example, if PD is set to 10:

profile pressure P6 occurs during cycles 1, 11, 21...

profile pressure PF occurs during cycles 2-10, 12-20...

Ascent rate: approximately .08 meters per second.


Total Up time is typically set to 12 to 20 hours, increasing proportional to depth and amount of data to be transmitted per profile. Another factor is deployment location: due to the polar orbit of ARGOS, the number of passes per day increases at high latitudes.

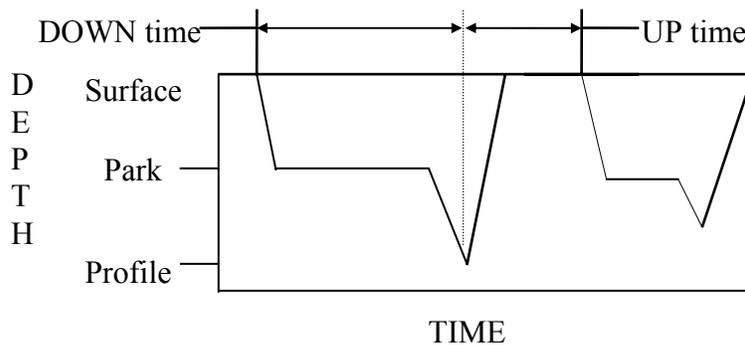

SCHEMATIC: Depth versus Time

Parameter **PD** determines the frequency of deep profiles.

Schematic examples:

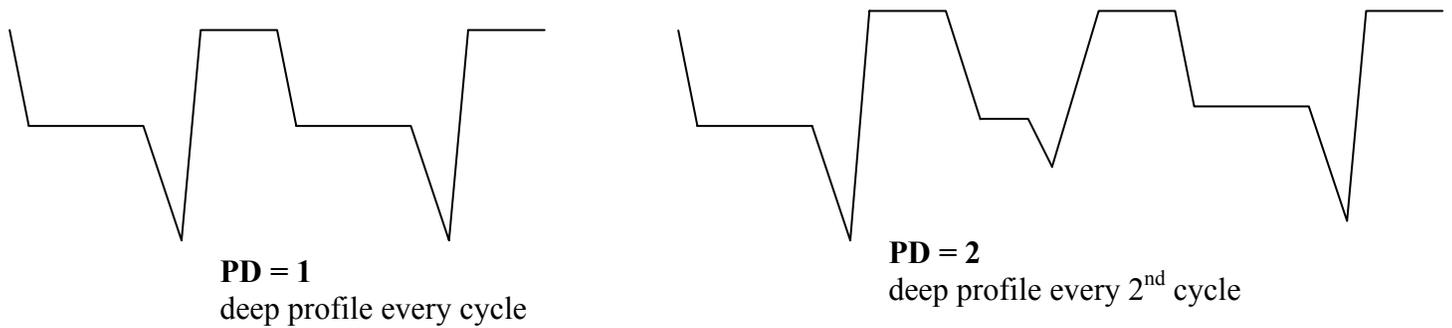

V. ARGOS DATA

A. SERVICE ARGOS PARAMETERS

The user must specify various options to Service ARGOS. These choices depend on how the user wishes to receive and process data. Typical parameters are listed below:

- Standard location.
- Processing: Type A2 (pure binary input; hexadecimal output)
- Results Format: DS (all results from each satellite pass), Uncompressed.
- Distribution Strategy: Scheduled, all results, every 24 hours.
- Number of bytes transmitted: 31 per message*

Note: Webb Research strongly recommends all users to use ARGOS “Multi Satellite Service”, which provides receptions from 3 satellites instead of 2 for a small incremental cost.

* Using Argos 28-bit ID Format, 31 data bytes are transmitted in each message. With 20-bit ID Format, each message had 32 data bytes. (see Appendix D for more information).

B. DATA FORMAT #19 for 28-bit ARGOS ID

Data are sent via ARGOS in 31 byte hex messages. The number of 31 byte messages sent depends on the programmed quantity of temperature measurements per profile.

Format for message number 1 only:

Byte #

- 01 **CRC**, described in section C.
- 02 **Message number**, Assigned sequentially to each 32 byte message (Total number of messages per profile is shown below). Messages are transmitted in sequential order starting with 1 and incrementing by one for the data set.
- 03 **Message block number**, begins as 1 and increments by one for every ARGOS message data set. This, combined with the ARGOS repetition rate (section VI), allows the user to track surface drift. Byte 03 will roll-over at 256 and will reset to 1 on each new profile.
- 04 & 05 **Serial number**, identifies the controller board number. (This may not be the same as instrument number.)
- 06 **Profile number**, begins with 1 and increases by one for every float ascent.
- 07 **Profile length**, is the number of six byte STD measurements in the profile. Total number of bytes of STD data from each profile depends on the sampling strategy chosen.
- 08 **Profile termination flag byte 2** -see section D
- 09 **Piston position**, recorded as the instrument reaches the surface.
- 10 **Format Number** (identifier for message one type)
- 11 **Depth Table Number** (identifier for profile sampling depths)
- 12 & 13 **Pump motor time**, in two second intervals. (multiply by 2 for seconds)
- 14 **Battery voltage**, at initial pump extension completion
- 15 **Battery current**, at initial pump extension completion, one count = 13 mA
- 16 **Profile 1 piston position** (*park and profile floats only*)
- 17 **Profile 2 piston position**
- 18 **Air bladder pressure** measured in counts - approximately 148 counts
- 19 & 20 **Park temperature**, sampled just before instrument descends to target depth.*
- 21 & 22 **Park salinity**, sampled just before instrument descends to target depth.*
- 23 & 24 **Park pressure**, sampled just before instrument descends to target depth.*
- 25 **Park battery voltage**, no load
- 26 **Park battery current**
- 27 & 28 **Surface Pressure**, as recorded just before last descent with an offset of +5 dbar
- 29 **Internal vacuum** measure in counts- approximately 101 counts
- 30 **Park piston position***
- 31 **SBE pump Voltage**

Format for message number 2

Byte #

- 01 **CRC**, described in section C.
- 02 **Message number**
- 03 & 04 time of profile start
- 05 & 06 first profile temperature
- 07 & 08 first profile salinity
- 09 & 10 first profile pressure
- 11 to 31 6 bytes- **in sequence and continuing in the next message****
 - 2 bytes **temperature**
 - 2 bytes **salinity**
 - 2 bytes **pressure**

**Note some byte pairs will split between messages.

Format for message number 3

Byte #

- 01 **CRC**, described in section C.
- 02 **Message number**
- 03 ~ 31 temperature, salinity, pressure points per depth table

Sampling continues as shown above, per the depth table.

After the last data point in last message, two bytes surface detect time will be followed by a Hex value of FF filling remaining bytes.

C. Timestamps

As mentioned above, two timestamps are included:

The first timestamp (bytes 03 & 04 of message no. 2) marks start of upcast profile.

The second timestamp (2 bytes preceded by the shallowest pressure value, followed by FF filling remaining bytes of last message) marks detection of (surface pressure + 5 db).

Each time count equals two seconds elapsed since the float was reset. The clock resets to zero every 24 hours.

D. Depth Table No. 64

Sample Point	Pressure (dbar)	Sample Point	Pressure (dbar)	Sample Point	Pressure (dbar)
	Bottom				
1	2000	37	600	73	240
2	1950	38	590	74	230
3	1900	39	580	75	220
4	1850	40	570	76	210
5	1800	41	560	77	200
6	1750	42	550	78	190
7	1700	43	540	79	180
8	1650	44	530	80	170
9	1600	45	520	81	160
10	1550	46	510	82	150
11	1500	47	500	83	140
12	1450	48	490	84	130
13	1400	49	480	85	120
14	1350	50	470	86	110
15	1300	51	460	87	100
16	1250	52	450	88	95
17	1200	53	440	89	90
18	1150	54	430	90	85
19	1100	55	420	91	80
20	1050	56	410	92	75
21	1000	57	400	93	70
22	950	58	390	94	65
23	900	59	380	95	60
24	850	60	370	96	55
25	800	61	360	97	50
26	750	62	350	98	45
27	700	63	340	99	40
28	690	64	330	100	35
29	680	65	320	101	30
30	670	66	310	102	25
31	660	67	300	103	20
32	650	68	290	104	15
33	640	69	280	105	10
34	630	70	270	106	4
35	620	71	260		
36	610	72	250		

APEX records a profile during ascent (ie upcast). Pressure is measured every 6 seconds during ascent. Whenever pressure is equal to or less than a value in the depth table, a CTD sample is recorded. The first (i.e. deepest) sample is taken at the first point in the depth table above bottom pressure.

The SeaBird CTD is not sampled at zero pressure, to avoid pumping the cell dry and/or ingesting surface oil slicks. The shallowest profile point is taken at either 4 dbar or at the last recorded surface pressure plus 5 dbar, whichever value is larger.

The number of sample points (ie **profile length**) will be reduced if the float is unable to reach intended depth for any reason. Bottom pressure may change due to several causes, such variation of insitu density, internal waves, float grounding in shallows, change of float mass, etc. APEX automatic depth adjustment will compensate in most, but not all, cases.

E. TEST MESSAGE FORMAT

The test message is sent whenever an **I2** command is given, the six transmissions during the startup cycle, and during the six hour surface mode period prior to the first dive. Each test message has 31 Bytes, in hex unless otherwise noted, with the following format:

Test message #1

Byte

- 01 **CRC**, described in section C.
- 02 **message number** (= 01)
- 03 **Message block number**, begins as 1 and increments by one for every ARGOS message.
- 04 & 05 **Serial number**, identifies the controller board number. (This may not be the same as instrument number.)
- 06 & 07 & 08 **Time from start up** HR:MIN:SEC
- 09 **Flag (2) Byte**
- 10 & 11 **Present CTD pressure**, in bar
- 12 **Battery voltage**
- 13 **Present bladder pressure**, in counts
- 14 **Flag (1) Byte**
- 15 **Up time one** in hours
- 16 **Up time two**, in hours
- 17 & 18 **Down time one**, in hours
- 19 & 20 **Down time two**, in hours
- 21 **Ascend time one**, in hours
- 22 **Ascend time two**, in hours
- 23 & 24 **park pressure** in counts
- 25 **Park piston position**, in counts
- 26 **Depth correction factor**, in counts
- 27 **Storage piston position (P4)**, in counts
- 28 **Fully extended piston position (P5)**, in counts
- 29 **Month**, software version number (in decimal).
- 30 **Day**, software version number (in decimal).
- 31 **Year**, software version number (in decimal).

* Flag (2) byte:

- 1 Deep profile
- 2 Pressure reached zero
- 3 25 minute Next Pressure timeout
- 4 piston fully extended before surface
- 5 Ascend time out
- 6 Test message at turn on
- 7 Six hour surface message
- 8 Seabird String length error

**Flag (1) byte:

- 1 Trip interval time
- 2 Profile in progress
- 3 Timer done
- 4 UP/ DOWN
- 5 Data entry error
- 6 Measure battery
- 7 Piston motor running
- 8 Negative SBE no.

Test message #2

Byte #

- 01 **CRC**, described in section C.
- 02 **message number** (= 02)
- 03 **Message block number**, begins as 1 and increments by one for every ARGOS message.
- 04 & 05 **Serial number**, identifies the controller board number. (This may not be the same as instrument number.)
- 06 & 07 & 08 **Time from start up** HR:MIN:SEC
- 09 **Flag (2) Byte**
- 10 & 11 **Current pressure**, in bar
- 12 **Battery voltage**
- 13 **Current Bladder pressure**, in counts
- 14 **Flag (1) Byte**
- 15 **Park pressure (least significant byte only)**
- 16 **park piston position**
- 17 **depth correction factor**
- 18 **Storage piston position**
- 19 **Full Piston position**
- 20 **OK Vacuum count**
- 21 **Max Air Bladder Pressure**
- 22 & 23 **profile 1 pressure**
- 24 **profile 1 piston position**
- 25 **deep profile cycle count**
- 26 & 27 **profile 2 pressure**
- 28 **profile 2 piston position**
- 29 **Month**, software version number (in decimal).
- 30 **Day**, software version number (in decimal).
- 31 **Year**, software version number (in decimal).
-

F. Telemetry error-checking (CRC)

Because ARGOS data contains transmission errors, the first byte of each message contains an error checking value. This value is a Cyclic Redundancy Check (CRC), and is calculated as a function of the message content (bytes 2 to 32).

- For each message, calculate a CRC value
- Compare the calculated CRC to the transmitted CRC (byte no. 2)
- If the calculated and transmitted CRC values are not equal, the message has been corrupted and should be deleted before further data processing.

Appendix (B) lists a sample program (in BASIC) to calculate the CRC value for a message. This program can be provided upon request in Basic, Fortran or C

G. Conversion from hexadecimal to useful units

The pressure is measured every 6 seconds. Temperature, salinity and pressure are measured and stored at each point in the depth table. Two hex bytes are stored for each sensor. The decimal numbers from the STD sensors are converted to hex for compression in the ARGOS transmission as follows:

Temperature: 5 digits, 1 milli-degree resolution.

Salinity: 5 digits, .001 resolution

Pressure: 5 digits, 10 cm resolution.

To convert the hex ARGOS message back to decimal numbers:

	hex	→	dec	=	converted	units
Temperature:	3EA6	→	16038	=	16.038	C
Temperature*:	F58B	→	02677	=	-2.677	C
Salinity**:	8FDD	→	36829	=	36.829	
Pressure:	1D4C	→	7500	=	750.0	decibars
Current	0A	→	10	=	130	mA
Volts	99	→	153	=	15.7	volts

Voltage (V) = counts/10 + .4 (counts is in decimal number) nominally 15 V and decreasing.

Current (mA) = counts *13 (counts is in decimal number)

Vacuum (inHg) = counts *-0.209 + 26.23 (counts is in decimal number) nominally 5 inHg.

*Note regarding negative temperatures (T °C < 0)

Positive temperature range is 0 to 62.535C (0 to F447 hex)

Negative temperature range is -0.001 to -3.000C (FFFF to F448 hex).

If (hex value) ≥ F448, then compute FFFF - (hex value) = Y

Convert Y to decimal = dec_Y

(dec_Y + 1) / 1000*-1 = degrees C

**The 5 most significant salinity digits are telemetered. The 6 digit salinity number is rounded up and converted to hex. 36.8286 rounds to 36.829 and converts to 8FDD.

VI. MISSIONS

This section lists the parameters for each float covered by this manual.
The parameter listing appears when the float is RESET while connected to a terminal.

INSTRUMENT # 1657

APEX version 05 18 04 sn 1975 019 064

64D50AD ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

251 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1658

APEX version 05 18 04 sn 1976 019 064

64D50BE ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

247 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1659

APEX version 05 18 04 sn 1977 019 064

64D50C7 ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

252 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1660

APEX version 05 18 04 sn 1978 019 064

64D5026 ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

247 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1661

APEX version 05 18 04 sn 1979 019 064

64D5035 ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

244 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1662

APEX version 05 18 04 sn 1980 019 064

64D504C ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

249 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1663

APEX version 05 18 04 sn 1981 019 064

64D505F ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

250 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1664

APEX version 05 18 04 sn 1982 019 064

64D506A ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

249 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1665

APEX version 05 18 04 sn 1983 019 064

64D5079 ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

250 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1666

APEX version 05 18 04 sn 1988 019 064

64D508B ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1 U2 D1 D2 T1 T2
014 008 106 112 009 006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

251 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

INSTRUMENT # 1667

APEX version 05 18 04 sn 1985 019 064

64D5098 ARGOS ID number.

030 seconds repetition rate.

UP DOWN ASCEND in hours:

U1	U2	D1	D2	T1	T2
014	008	106	112	009	006

0350 d-bar park pressure. P1

115 park piston position. P2

012 ascent rate correction. P3

100 storage piston position. P4

251 piston full extension. P5

2000 d-bar profile pressure. P6

025 profile piston position. P7

0700 d-bar PFL 2 pressure. PF

075 PFL 2 piston position. PG

115 OK vacuum count. P8

145 air bladder pressure. PB

010 deep profile count. PD

025 Initial piston extension.

006 hours sink to depth one.

003 hours sink to depth two.

Appendix A: Flag Byte Description

Two memory bytes are used, one bit at a time, to store 16 different bits of program flow information. Both of these bytes are telemetered in the test messages sent at startup and for the initial 6 hour surface period. Only flag byte 2 is sent in the data messages, as part of message number 1. Bit one is set for each deep profile and bit 8 is set each time the last SBE sensor value used an arithmetic round up.

Below is a list of what each bit in each byte signifies.

bit
Flag (2) byte: 1 Deep profile
2 Pressure reached zero
3 25 minute NextP timeout
4 Piston fully extended
5 Ascend timed out
6 Test message at turn on
7 Six hour surface message
8 Seabird string length error

bit
Flag (1) byte: 1 Trip interval time
2 Profile in progress
3 Timer done (2 min bladder deflate time.)
4 UP/DOWN
5 Arithmetic round up
6 Measure battery while pumping
7 Piston motor running
8 Negative SBE number

The flag bytes are transmitted as two hex characters with four bits of information encoded in each character. Each hex character can have one of 16 different values as shown in the following table.

1	0	0000	10	9	1001
2	1	0001	11	A	1010
3	2	0010	12	B	1011
4	3	0011	13	C	1100
5	4	0100	14	D	1101
6	5	0101	15	E	1110
7	6	0110	16	F	1111
8	7	0111			
9	8	1000			

Bit 8 is the most significant bit and bit 1 is the least significant bit in the byte.

As an example: if a deep profile ended with the piston fully extended and ascend had timed out, then bits 1, 4 and 5 would be set in the termination byte. This binary pattern, 0001 1001, would be transmitted as the two hex characters, 19.

As another example: if a regular profile ended with the piston fully extended and the 25 minute next pressure had timed out, then bits 3 and 4 would be set in the termination byte. This binary pattern, 0000 1100, would be transmitted as the two hex characters, 0C.

Appendix B: CRC Algorithm in BASIC for 28 bit Id

Below is a sample program (in BASIC) to calculate the CRC value for a message. This program can be provided upon request in Basic, Fortran or C.

```
DECLARE FUNCTION CRC% (IN() AS INTEGER, N AS INTEGER)
'CRC routine to check data validity in ARGOS message.
'Bathy Systems, Inc. RAFOS Float data transmission.
'3 December, 1990.
'The 1st of 31 bytes in an ARGOS message is the CRC.
'The function CRC will compute CRC for byte 2 through 31.
'Hasard is used for Random because Random is reserved by BASIC.
'Stored as file CRC in C:\RAFOS\RAF11.
DECLARE SUB Hasard (ByteN AS INTEGER)
DEFINT A-Z
DIM in(31) AS INTEGER
'RAF11F message number 08 HEX ID 11502 01-02-93 CRC is O.K.
A$ = "d802075d87c64e15078187c64c1f07b287c74a3007ce87c6483f07fe87c246"
  N = 31
  FOR I = 1 to N
    in(I) = VAL("&H" + MID$(A$, 2 + I - 1, 2))
  NEXT I
  PRINT in(1); CRC(in(), N);

FUNCTION CRC% (IN() AS INTEGER, N AS INTEGER) STATIC
DIM ByteN as INTEGER
  I = 2
  ByteN = in(2)
  DO
    CALL Hasard(ByteN)
    I = I + 1
    ByteN = ByteN XOR in(I)
  LOOP UNTIL I = N
  CALL Hasard (ByteN)
  CRC = ByteN
END FUNCTION

DEFINT A-Z
SUB Hasard (ByteN AS INTEGER) STATIC
x% = 0
  IF ByteN = 0 THEN ByteN = 127: EXIT SUB
  IF (ByteN AND 1) = 1 THEN x% = x% + 1
  IF (ByteN AND 4) = 4 THEN x% = x% + 1
  IF (ByteN AND 8) = 8 THEN x% = x% + 1
  IF (ByteN and 16) = 16 THEN x% = x% + 1
  IF (X% AND 1) = 1 THEN
    ByteN = INT(ByteN / 2) + 128
  ELSE
    ByteN = INT(ByteN / 2)
  END IF
END SUB
END SUB
```

Appendix C: Surface arrival time, and total surface time

Some users may wish to determine surface arrival time, and total surface time, in order to calculate drift vectors.

Although each 31-byte message is time-stamped by ARGOS, there may not be a satellite in view when the float surfaces.

When the float surfaces (ie detects surface pressure recorded before last descent) it will begin ARGOS telemetry. Messages are transmitted in numerical order, starting with message no. 1. When all messages have been transmitted, the cycle starts again at message no. 1.

Elapsed time since surfacing (T_e)

$$T_e = (m-1)*n*r$$

Where: m = message block number (byte 03 of message 01)

n = total number of messages to transmit profile

r = repetition rate

Total number of messages (n) is described in section IV (b), or may be determined from the ARGOS data. Note (n) may be less than specified in user manual if the float is operating in shallow water, causing reduced profile length.

Repetition rate (r) is the time interval between ARGOS transmissions. This value can be determined from section V, or from the ARGOS data.

Approximate time of surfacing

Subtracting T_e from the ARGOS time stamp can determine approximate time of surfacing

Example

Below is message 01 in DS format

```
2001-11-02 22:47:54 1 CF 01 05 02
AF 02 2F 00
85 01 01 01
16 92 17 19
9E 94 01 AD
85 09 1F 48
97 9B 00 46
62 24 0E
```

m = message block number (byte 03) = 5

n = total number of messages to transmit profile = 11

$r =$ repetition rate = 62 seconds

$T_e =$ elapsed time since surfacing = $(m-1)*n*r = (5-1)*11*62 \text{ s} = 2728 \text{ s} = 00\text{h } 45\text{m } 28\text{s}$

Approximate time of arrival at surface:

ARGOS time stamp - $T_e = 22:47:54 - 00:45:28 = 22:02:26$

Total time spent at surface transmitting (T_{surf}):

This is determined by subtracting ascent time from UP time.

$T_{surf} = (\text{UP time, hr}) - (\text{bottom pressure})/(\text{ascent rate } 0.08 \text{ dbar/s})/3600$

Bottom pressure is telemetered as bytes 7 & 8 of message 02.

Example:

For bottom pressure of 2000 dbar, and UP time of 18 hours

$T_{surf} = (18 \text{ hr}) - (2000/0.08/3600) = 11 \text{ hr}$

APPENDIX D: Argos ID formats, 28 bit and 20 bit

In 2002 Service Argos notified its users there were a limited number of 20-bit Ids available and to begin preparing for a transition to 28-bit IDs. The 28 bit-IDs reduced from 32 to 31 the number of data bytes in each message. Data provided by Argos will consist of 31 hex bytes per message. Data acquired by use of an uplink receiver will consist of 32 hex bytes per message. The first byte, when using an uplink receiver, is a 28-bit ID identifier used by Argos and is not represented in the Apex Data formats included in this manual.

APPENDIX E: Storage conditions

For optimum battery life, storage temperature range is +10 to +25 degrees C. When activated, the floats should be equilibrated at a temperature between -2 and +54 degrees C. If optional VOS or aircraft deployment containers are used, these must be kept dry, and should be stored indoors only.

APPENDIX G: Returning APEX for factory repair or refurbishment

Contact WRC before returning APEX floats for repair or refurbishment.
All returns from outside USA, please specify our import broker:

Logan International Airport, Boston
c/o DHL-Danzas Freight Forwarding Agents,
Phone (617) 886-5605, FAX (617) 241-5917
500 Rutherford Avenue, Charlestown, MA 02129

Note on shipping documents: US MADE GOODS

APPENDIX G: CTD Calibration and Ballasting records